

- Floor type / Vertical installation method

Column packing list:



a



b



c


S/N	Name	Quantity
a	Column	1
b	Expansion Anchor Bolt（M8*60）	4
c	Machine Screw（M5*20）	14

Note


Column products need to be purchased additionally.

Step 1:


1. Drill four 60 mm deep holes spaced 170*120 mm apart using a 12 mm drill bit.
2. Drill one Φ60mm outlet hole in the center.
3. Clean the hole position.

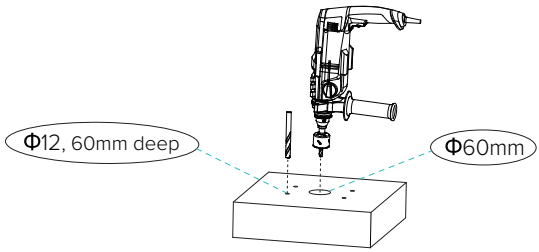


Step 2:
Install the expansion anchor bolt (b) and fix them with a wrench.

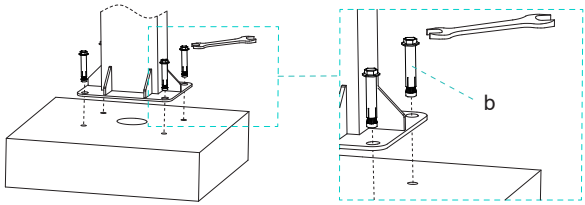


Step 3:
Router the input wire into the column hole through the bottom of the column.

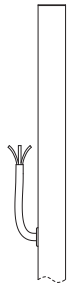

Step 4:
Fix the Mounting backplate (B) to the column with screws (c).

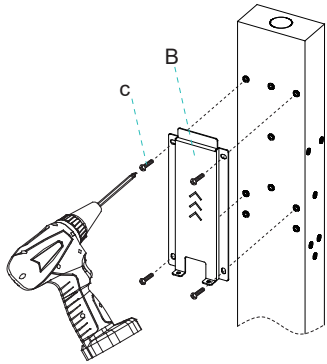

Step 5:
Fix the Mounting backet (C) onto the EV Charger with screws (K).

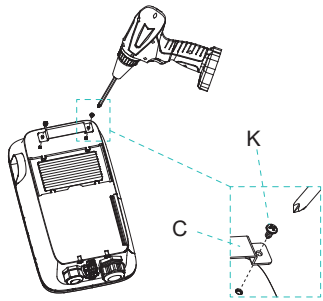

Step 6:
1. Hang the EV Charger into the Mounting backplate.
2. Tighten the screws (J) to complete the installation.

